

## Restoring Factory Defaults on a Clearly Fax ATA

The following steps will reset your Clearly Fax ATA to factory defaults:

1. Unplug the power cord on the ATA for 10 seconds
2. Locate the "Reset" button



3. Hold down the Reset button with a pin or paperclip and plug the power cord back into the ATA
4. Continue to hold the reset button for 10 seconds after connecting power to the ATA
5. Wait for ~5 minutes for the provisioning/reset/registration process to complete

Once complete you should be able to send/receive faxes as expected. Please don't hesitate to contact us if you have any questions or problems.